


© Panduit Corp. 2014

IndustrialNet LC Fiber Bulkhead Connectors

Part Numbers: IAEF7JMA, IAEF617P-7PM*, IAEF617P-NM*

INSTALLATION INSTRUCTIONS


LC Industrial Bulkhead Adapter IAEF7JMA Bulkhead w/ face seal Dust caps (not shown) Bulkhead seal Tether with cap

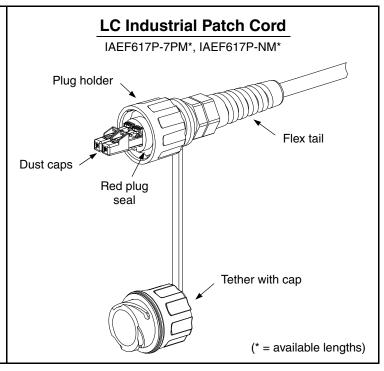


FS063

Installation of Industrial Bulkhead

Note: Remove dust caps on bulkhead and plug sides prior to installation.

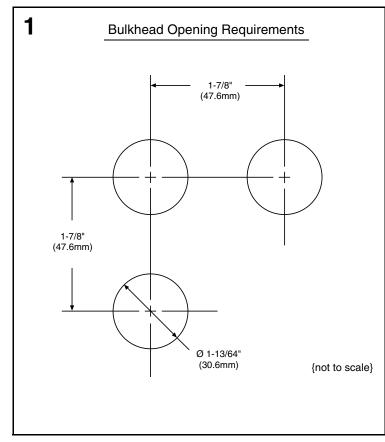

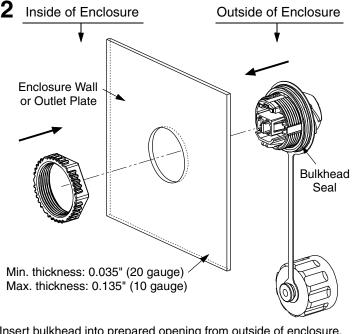


Insert bulkhead into prepared opening from outside of enclosure. While holding bulkhead in place, secure with nut on inside of enclosure. Hand turn nut 4-1/4 to 5 full turns. Be careful not to tighten to the point the bulkhead seal is over compressed and displaced from the enclosure wall and the bulkhead. Note: If using wrench, flats on nut should be on the outside.

For Technical Support: www.panduit.com/resources/install maintain.asp

Installation of Industrial Patch Cord to Industrial Bulkhead

Note: Bulkhead combination must be used on a flat surface of a NEMA Type 12 enclosure to maintain rating.

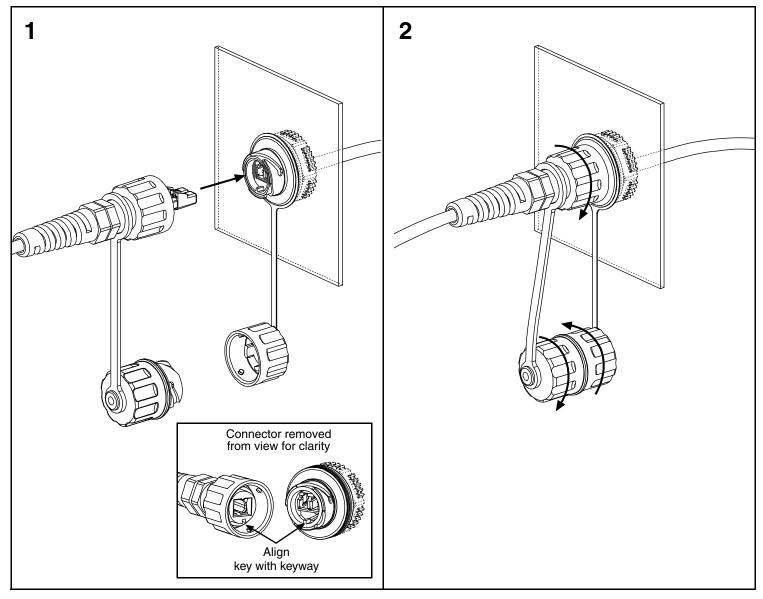

Note: Clean plug connector end faces and red plug seal with each connector mating cycle.

For Instructions in Local Languages and Technical Support:

www.panduit.com/resources/install_maintain.asp



E-mail: techsupport@panduit.com Phone: 866-405-6654