

# **BRASS INSERTS**



Self-tapping Brass Inserts fit into molded pads in the bottom of the enclosure. Inserts have an M2 internal machine screw thread and M4 self-tapping external thread.

**BULLETIN: Q41Y** 

Catalog Number	Description	Qty. Pkg.	
QEBI	M2 thread inserts	4	

## **HINGE KIT**




Includes two polyamid hinges, eight M4 self-tapping zinc-plated screws, eight flat washers and drilling template. Use on all QLINETM E enclosures. Kit might not meet Type 4 requirements and should, therefore, be verified by customer.

**BULLETIN: Q41Y** 

Catalog Number QDEHK

#### **MOUNTING BRACKET KIT**

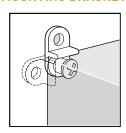


Kit includes four polycarbonate brackets and four M4 self-tapping, plated screws. Use on all QLINE™ E enclosures. No modification to the enclosure is required for installation. Maintains listed ratings.

**BULLETIN: Q41Y** 

Catalog Numbe OFMFK

#### **HARDWARE KIT**



Four cross-point polyamide cover screws and four self-tapping plated screws used to mount optional panels, rails and other components. This kit is offered as a replacement kit for lost or damaged hardware originally furnished with the enclosure.

**BULLETIN: Q41Y** 

Catalog Number	Description	Fits QLINE Enclosure
QEHK35	35-mm screw	when C = 67 mm, 117 mm or 142 mm
QEHK60	60-mm screw	when C = 92 mm

## **PANELS**



## **BULLETIN: Q41Y**

Catalog Number	Panel Size D x E mm/in.
Q138PE	98 x 48 3.86 x 1.89
Q1313PE	98 x 98 3.86 x 3.86
Q1813PE	148 x 98 5.83 x 3.86
Q1818PE	148 x 148 5.83 x 5.83
Q2518PE	223 x 148 8.78 x 5.83