

Bottom Cover Kit

is installed on the back of the enclosure to provide an additional mounting surface for Type 4X dual access applications. Kit includes clear polycarbonate cover, polyamide cover screws, and adapter bushing.

Note: No mounting provision is available at this time. Please consult Hoffman.

Catalog Number	Size Height x Width	Fits QLINE Enclosure L x W
Q-2020IBCKCC	200 x 200 (7.87 x 7.87)	200 x 200
Q-3020IBCKCC	300 x 200 (11.81 x 7.87)	300 x 200
Q-4020IBCKCC	400 x 200 (15.75 x 7.87)	400 x 200
Q-3030IBCKCC	300 x 300 (11.81 x 11.81)	300 x 300
Q-4030IBCKCC	400 x 300 (15.75 x 11.81)	400 x 300


Hinge Kit

includes two polyamide hinges, eight M4 selftapping zinc plated screws, eight flat washers, and drilling template.

Note: Kit may not meet Type 4 requirements and should therefore be verified by customer.


Catalog Number

Q-IHK

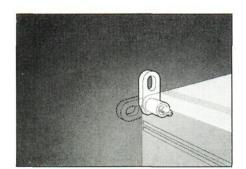

Mounting Foot Kit

has four polycarbonate feet and four M3 self-tapping zinc plated screws. Kit is field installable. Maintains listed ratings for enclosure. **Catalog Number** Q-IMFK

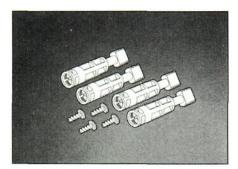

Hardware Kit

includes four polyamide cover screws and four M5 self-tapping zinc plated panel screws. This kit is offered as a replacement kit for lost or damaged hardware originally furnished with the enclosure.

Catalog Numbe	r Description
0-IHK424	42mm screw

Data subject to change without notice