



## **BACKSHELL KIT INCLUDES:**

- (2) BACKSHELL HALVES
- (3) HOUSING SCREWS & NUTS
- (2) THUMBSCREWS
- (1) GROMMET TREE (NON-CONDUCTIVE) [162-000-925R000]

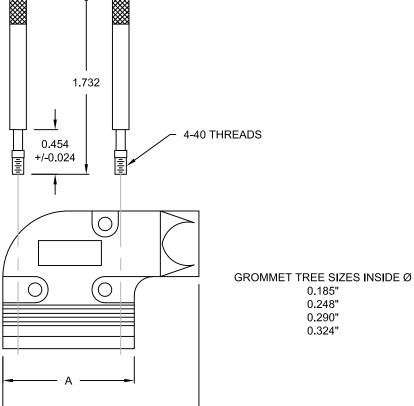

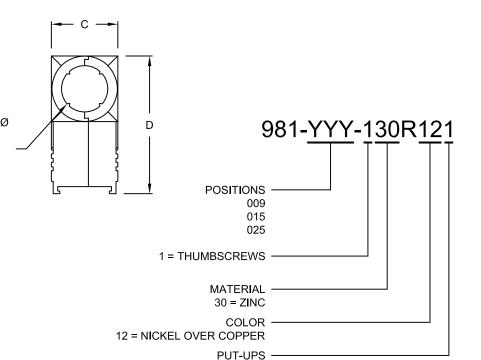

1 = KIT

ROHS COMPLIANT

THESE II THE PRO BE REPR BASIS FO

THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NorComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OR SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.

DRAWN:

C. SMITH

DATE:

02/16/2007

UNITS = INCHES

DO NOT SCALE FROM DRAWING



		1	1	3
NTS 1 1 3	NAC NO			•
NTS 1 1 1 3	DWG NO.		<u> </u>	
	NTS	1	1	3