


## T2 Terminator Tooling

# **Application Tooling Specification Sheet**

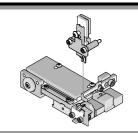

Order No. 63912-3700

#### **FEATURES**


- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tablength
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

#### **SCOPE**

Products: 1.50mm (.059") Pitch CLIK-Mate™ Wire-to-Board Crimp Terminals, 26-30 AWG.

♦ Overall insulation OD specification for terminal.

Tarminal	Terminal Order No.	Wire Size			Insulation	Ctrin I	onath		
Terminal Series No.				IPC/WHMA-A620◆		Terminal → →		Strip Length	
Series No.		AWG	mm²	mm	ln.	mm	ln.	mm	ln.
		26	0.136	0.70-1.02	.028040	0.70-1.02	.028040		
503429	503429-0000	28	0.080	0.70-1.02	.028040	0.70-1.02	.028040	1.50-1.90	.059075
		30	0.049	0.70-1.02	.028040	0.70-1.02	.028040		
◆To achieve ontimum IPC-A620 insulation crimps use this insulation OD range									

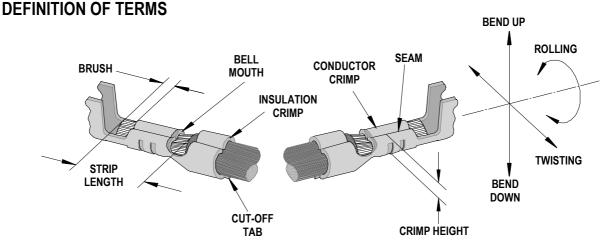

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Doc No: ATS-639123700 Release Date: 04-26-12 **UNCONTROLLED COPY** Page 1 of 6 Revision: A Revision Date: 04-26-12

### **CRIMP SPECIFICATION**

Tarminal Carias No.	Bell n	nouth	Cut-off Tak	Maximum	Conductor Brush		
Terminal Series No.	mm	ln.	mm	ln.	mm	ln.	
503429	0.05-0.40	.002016	0.10	.004	0.10-0.60	.004024	

	Pand up E	Twist F	Roll	Punch Width mm (Ref)				Seam Seam shall not be open	
Terminal Series No.	Bend up Bend down		I WIST KOII		Conductor		Insulation		
	Degree		Degree		mm	In	mm	In	and no wire allowed out
503429	3	3	3	8	0.90	.035	1.10	.043	of the crimping area

After crimping, the conductor profile should measure the following.

Tarminal	Wire	Size	Conductor Crimp					Pull Force	
Terminal Series No.	AWG	mm²	Crimp	Height	Crimp Wi	dth (Ref.)	Minimum		
Series No.			mm	ln.	mm	ln.	N	Lb.	
503429	26	0.136	0.54-0.59	.021023	0.90	.035	19.6	4.41	
	28	0.080	0.50-0.55	.019022	0.90	.035	9.8	2.20	
	30	0.049	0.47-0.52	.018021	0.90	.035	4.9	1.10	

	Wire	Size	Insulation					
Terminal Order No.	AWG	mm²	Crimp	Height		rimp Width (Ref.)		
			mm	ln.	mm	ln.		
503429	26	0.136	1.35	.053	1.15	.045		
	28	0.080	1.35	.053	1.15	.045		
	30	0.049	1.35	.053	1.15	.045		

#### **Tool Qualification Notes:**

- 1. Pull Force should be measured with no influence from the insulation crimp.
- 2. The above specifications are guidelines to an optimum crimp.


**UNCONTROLLED COPY** Page 2 of 6 Doc No: ATS-639123700 Release Date: 04-26-12 Revision: A Revision Date: 04-26-12

# **PARTS LIST**

	T2 Terminator 63912-3700								
Item	Order No	Engineering No.	Description	Quantity					
		Perishable	e Tooling						
	63912-3770	63912-3770	Tool Kit (All "Y" Items)	REF					
1	63457-0089	63457-0089	Conductor Punch	1 Y					
2	63455-0111	63455-0111	Conductor Anvil	1 Y					
3	63446-1102	63446-1102	Insulation Punch	1 Y					
4	63445-1105	63445-1105	Insulation Anvil	1 Y					
5	63443-0005	63443-0005	Front Cut-Off Plunger	1 Y					
6	63443-0012	63443-0012	Front Plunger Retainer	1 Y					
		Other Con	nponents						
7	11-18-4083	60707-8	Feed Guide	1					
8	11-24-1067	4996-4	Cut-Off Plunger Spring	1					
9	63443-0009	63443-0009	Front Scrap Chute	1					
10	63443-0024	63443-0024	Key	1					
11	63443-0085	63443-0085	Wire Stop L-Bracket	1					
12	63443-0090	63443-0090	Wire Stop	1					
13	63443-1720	63443-1720	Height Spacer	1					
14	63443-2201	63443-2201	1.00mm Coarse Spacer	1					
15	63443-2216	63443-2216	16.00mm Coarse Spacer	1					
16	63443-2303	63443-2303	3.15mm Fine Spacer	1					
17	63443-2805	63443-2805	Front Plunger Striker	1					
18	63443-2905	63443-2905	Wire Hold Down Plunger	1					
19	63443-6003	63443-6003	Rear Cover	1					
20	63443-7201	63443-7201	Spring Cover	1					
21	63600-0021	63600-0021	Wire Hold Down Spring	1					
22	63600-2972	63600-2972	Collar	2					
		Fra	me						
23	63800-8500	63800-8500	T2 Terminator	1					
		Hardy	ware						
24	N/A	N/A	M3 by 6 Long SHCS	2**					
25	N/A	N/A	M3 by 6 Long FHCS	1**					
26	N/A	N/A	M4 by 6 Long SHCS	2**					
27	N/A	N/A	M4 by 12 Long BHCS	2**					
28	N/A	N/A	M4 by 14 Long SHCS	2**					
29	N/A	N/A	M4 by 30 Long SHCS	2**					
30	N/A	N/A	M4 by 50 Long SHCS	2**					
31	N/A	N/A	M5 by 12 Long SHCS	1**					
32	N/A	N/A	#10-32 by 3/8"Long BHCS	1**					
** Ava	** Available from an industrial supply company such as MSC (1-800-645-7270).								

Doc No: ATS-639123700 Release Date: 04-26-12 **UNCONTROLLED COPY** Page 3 of 6

Revision Date: 04-26-12

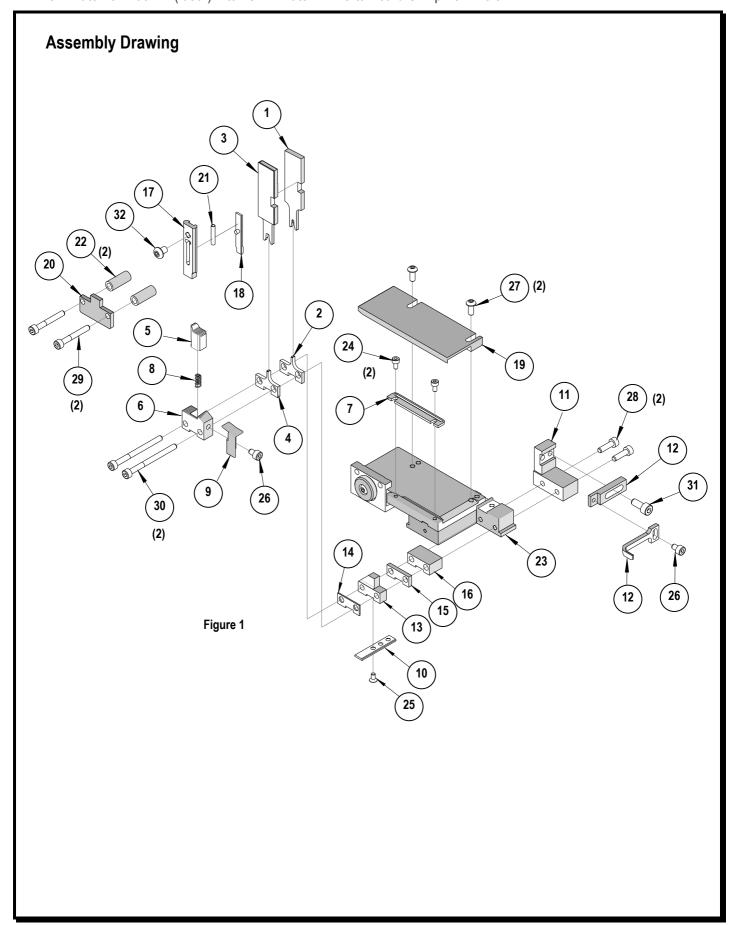

Doc No: ATS-639123700 Revision: A Release Date: 04-26-12 Revision Date: 04-26-12

#### **NOTES**

#### Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

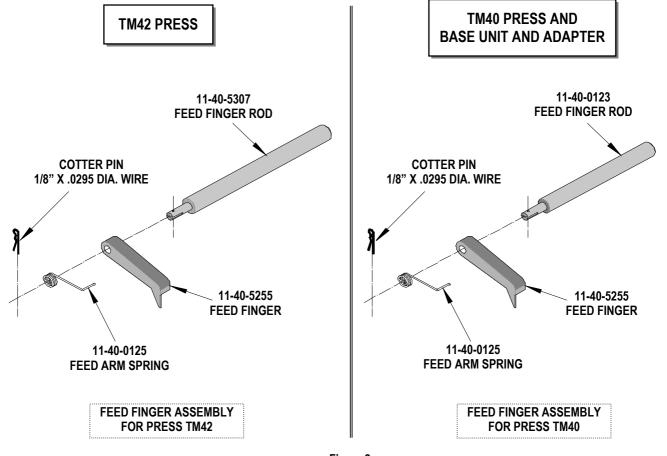


Figure 2

Doc No: ATS-639123700 Release Date: 04-26-12 **UNCONTROLLED COPY** Page 5 of 6 Revision: A Revision Date: 04-26-12

#### **NOTES**

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

**CAUTION**: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

http://www.molex.com

Doc No: ATS-639123700 Release Date: 04-26-12 UNCONTROLLED COPY Page 6 of 6